



INSTRUCTIONS

 
CDT

---

CD Transport



Attention: Your product is marked with this symbol.

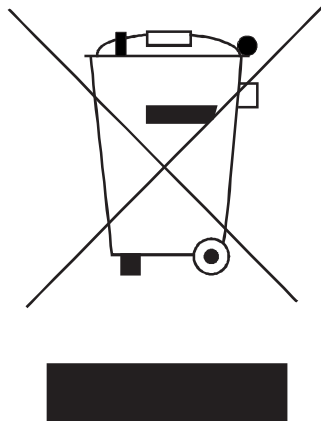

It means that used electrical and electronic products should not be mixed with general household waste. There is a separate collection system for these products.

#### A. Information on Disposal for Users (private household).

##### 1. In the European Union

Attention: If You want to dispose of this equipment, please do not use the ordinary dust bin.

Used electrical and electronic equipment must be treated separately and in accordance with legislation that requires proper treatment, recovery and recycling of used electrical and electronic equipment.

Following the implementation by member states, private household within the EU states may return their used electrical and electronic equipment to designated collection facilities free of charge\*. In some countries\* your local retailer may also take back your local authority for further details.

If you used electrical or electronic equipment has batteries or accumulators, please dispose of these separately beforehand according to local requirements.

By disposing of this product you will help ensure that waste undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health which could otherwise arise due to inappropriate waste handling.

##### 2. In the other Countries outside EU

If you wish to discard this product, please contact your local authorities and ask for the correct method of disposal.

For Switzerland: Used electrical or electronic equipment can be returned free of charge to dealer, even if you don't purchase a new product. Further collection facilities are listed on the homepage of [www.swico.ch](http://www.swico.ch) or [www.sens.ch](http://www.sens.ch).

#### B. Information on Disposal of Business Users

##### 1. In the European Union

 
If the product is used for business and you want to discard it:

Please contact local dealer who will inform you about the take-back of the product. You might be charged for the costs arising from take-back and recycling. Small products (and small amounts) might be taken back by your local collection facilities.

##### 2. In the other Countries outside the EU

If you wish to discard of this product, please contact your local authorities and ask for the correct method of disposal.



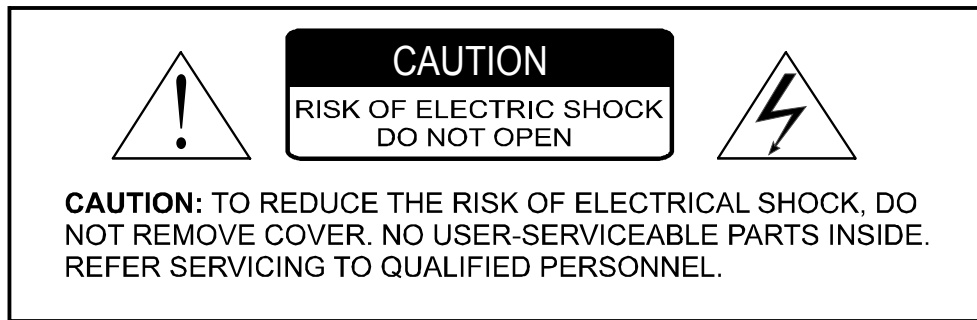

The exclamation point within an equilateral triangle is intended to alert the user to presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to presence of uninsulated "Dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

### Before Use

Please read all instructions and precautions carefully and completely before operating this device.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Always keep this unit out of the reach of children.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Unplug this apparatus during lightning storms or when unused for a long time.
11. Always disconnect your entire system from the AC mains before connecting or disconnecting any cable, or when cleaning any component.
12. This product must be terminated with a three conductor AC mains power cord which includes an earth ground connection, to prevent shock hazard, all three connections must always be used.
13. AC extension cords are not recommended for use with this product.
14. Never use flammable or combustible chemicals for cleaning audio components.
15. Never operate this product with any cover removed.
16. Never pour or spill liquids directly onto this unit.
17. Never block air flow through ventilation slots or heat sinks.
18. Never bypass any fuse.
19. Never replace any fuse with a value or type other than those specified.
20. Never attempt to repair this product, if a problem occurs, contact your dealer.
21. Never expose this product to extremely high or low temperatures.
22. Never operate this product in an explosive atmosphere.



## 2.1 Precaution In Use

### Installation

Select a location which is level, dry and neither too cold nor too hot, between 5°C (41 °F )and 35 °C (95°F ).  
Avoid a dusty location or a location subject to vibrations.

### Power

When unplugging from the wall outlet, always pull on the plug, not on the power cord.

### Malfunctions, etc.

Do not insert any metallic object into the player.

The discs to be played on this player are limited to those bearing the mark below (Fig.1).

Placing anything other than a compact disc on the tray may cause the player to malfunction.

If something goes wrong, turn the power off immediately. If the same phenomenon occurs when the power is turned on again, turn the power off and consult your XINDAK dealer.

### Volume setting

As a compact disc causes almost no noise, it is difficult to set the volume level by listening to noise as in the case of an ordinary analog turntable or a tape deck. If the volume level is raised too much because the beginning of the selection is quiet, the speakers may be damaged by a sudden increase in the sound level.

## 2.2 Condensation

As the compact disc player uses optical parts, moving it from a cold to warm place or using it in a room subject to excessive humidity or in a room where a fire has just been lit may cause condensation on the optical parts. This phenomenon may prevent the light from being correctly transmitted, and may cause noise or malfunction.

If dew condenses and the player does not function correctly, leave it on for several hours with the power turned on.

If the player does not function even after such period, consult your dealer.

### Note:

**When this unit is placed near a tuner or a receiver noise may occur. If this happens, move this unit as far from the tuner or the receiver as possible, or briefly turn off the power of the unit.**

CAUTION: There is Class 1 laser Diode inside. Do not remove the cover or attempt to touch the inside. NEVER attempt to repair this product. If a problem occurs, contact your XINDAK dealer.  
This caution marks on the rear panel of the unit.


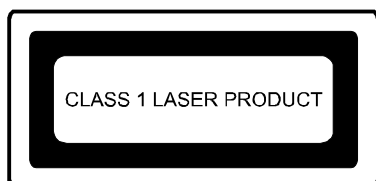 


Fig.1

 

### 2.3 Compact Discs

This player can play back the CD-RW (Re-Writable) discs as well as ordinary Audio CD and CD-R (Recordable) discs.

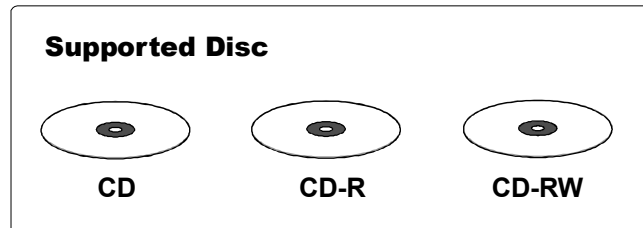

Since compact disc are made of plastic, they can be easily damaged; if the disc gets dirty, dusty, damaged or warped, the sound will not be picked up correctly, and such disc may cause the player to malfunction. When handling compact disc, use the following precautions.

Do not touch the surface of the disc (reflective silver i.e the side without the label), when handling the disc.

#### Storage

Make sure to keep disc in their cases. If disc are piled on top of one another without cases, they can be damaged. Do not put disc in a location exposed to direct sunlight or in a place with high temperature and humidity. Avoid leaving disc in your car.

 
#### Maintenance of disc

When fingerprints and dirt adhere to a disc, wipe the disc off with a soft, dry cloth from the inside towards the outside. If it is difficult to clean, wipe the disc with a cloth moistened with water.

Do not use record cleaners, benzene, alcohol or antistatic agent.

Do not damage the label side or stick paper or adhesive to the surface.

In the case of an 8cm(3") single CD, place it in the disc hold, for an 8 cm (3") disc, within the tray.

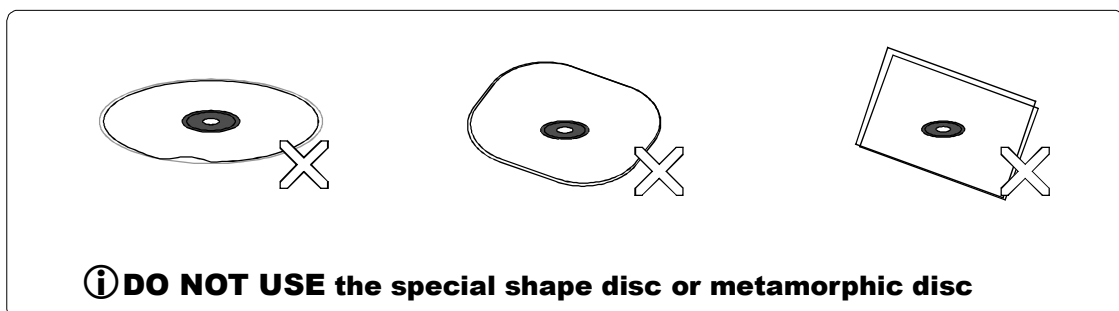

Please do not play the CD which is not round, otherwise it may cause fault on this player.



### 2.4 For Using the Remote Controller

#### Install Batteries

Before using the remote controller for the first time, you need install the new battery in the remote controller.

#### Process

1. Use the tool to remove the rear cover of the remote control unit.
2. Install the 2 batteries (AAA) with correct +/- polarity.
3. Reinstall the rear cover of the remote control unit.

#### Battery Replacement

1. Use the tool remove the rear cover of the remote control unit.
2. Take out the old batteries from remote control unit.
3. Install the 2 batteries (AAA) with correct +/- polarity.
4. Reinstall the rear cover of the remote control unit.

 

 
#### Caution

1. Do not use new and old batteries simultaneously.
2. Batteries with similar shapes may have different rated voltages. Be sure to use the correct batteries.
3. Remove batteries from the remote control unit if it will not be used for a long period of time.

#### Using Remote Controller

If you use the remote control unit to control the amplifier:


1. The remote control range is approximately 5 meters.
2. Pointing the remote control on an angle to the receiver, will shorten the useful distance of the remote control.

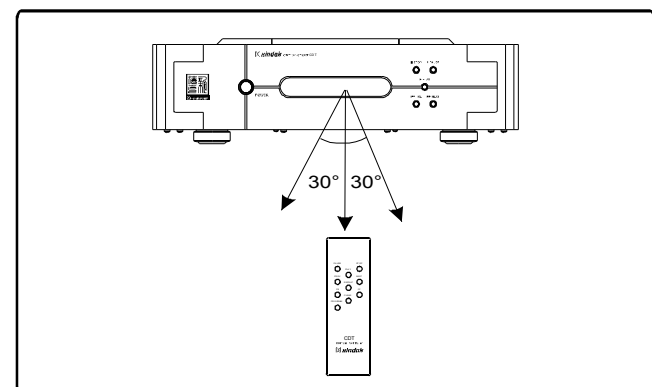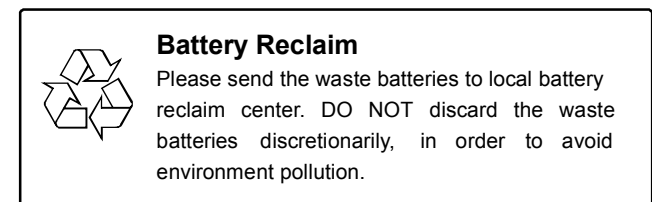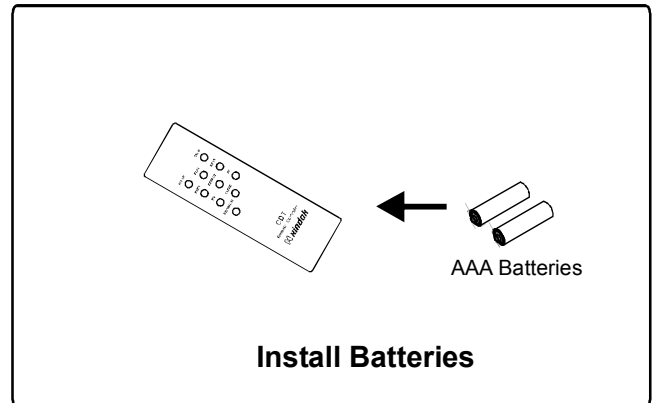

**Incorrect use of batteries may cause corrosion or damage.**  
**The lower temperature, then shorter battery life.**




### 3.1 Remote Controller

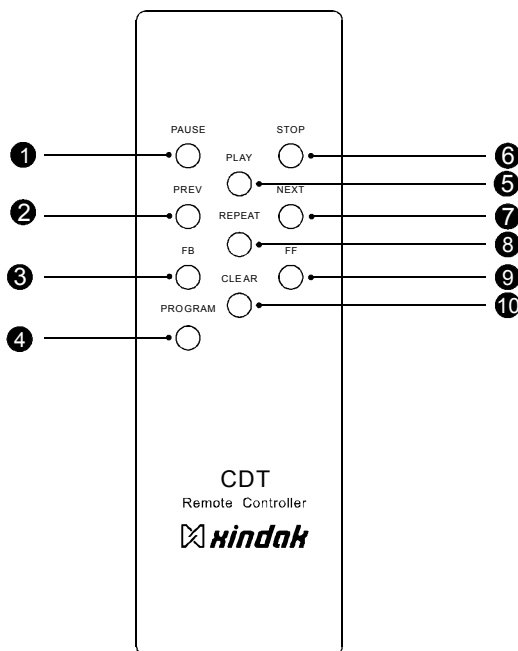 

#### 1. Pause

Press down this button the machine will stop to play while the disc keeps turning around . Press the play button the unit will resume playback from the same point which it was pause .

#### 2. Previous Track


Press  button, the CD player will skip to the beginning of the previous track.

#### 3. Search Backward


Press down this button during play, the machine will begin to scan backward at 4 times speed of the normal., Repress this button will begin to scan backward at 8 times speed of the normal , the third time to press this button the unit will resume normal play .

**4.Program Play** (More detail to see in the program play chapter)


#### 5. Stop Play

Press  button to stop play.

#### 6. Play

Press  button to start play.

#### 7. Skip Forward

Press  button, the CD player will skip to the beginning of the next track.

**8. Repeat play** (More detail to see in the program play chapter)

#### 9. Search Forward

 
Press down this button during play, the machine will begin to scan forward at 4 times speed of the normal Repress this button will begin to scan forward at 8 times speed of the normal.,the third time to press this button the unit will resume normal play .

#### 10.Clear/Cancel

Cancel the function operation.



## 3.2 Front & Rear Panel

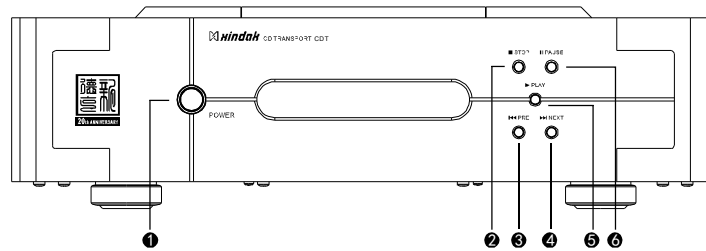

### 1. POWER

Press this button, the current will be put through; press it again, the current will be cut off.

### 2. STOP

Press this button to stop play.

### 3. PRE

When pressed select the previous track.

### 4. NEXT

 
When pressed select the next track

### 5. PLAY

Press this button to start play. Press this button during play, the player will replay from the first track.

### 6. PAUSE

Press down this button the machine will stop to play while the disc keeps turning around . Press the play button the unit will resume playback from the same point which it was pause .

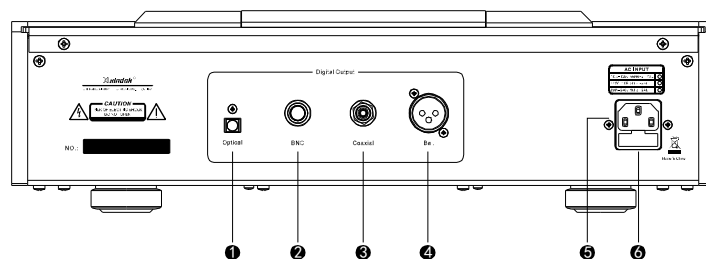

### 1. Digital Optical Output Jack

By connecting this jack with optical signal cable to putput the digital signal to the DAC or receiver.

### 2. Digital BNC Output Jack

By connecting this jack with BNC signal cable to output the signal to the dac or receiver.

### 3. Digital Coaxial Output Jack

By connecting this jack with coaxial signal cable to output the signal to the dac or receiver.

### 4. Digital Balanced Output Jack

By connecting this jack with balanced signal cable to output the signal to the dac or receiver.

### 5. AC Input Socket

Plug in the mains cable before connecting its other end to the wall socket. Check the equipment you own is set to the mains voltage used in your country.

### 6. Fuse Holder

Use same type fuses only.



## 4.1 Program Play

To play the disc as the order you edited

1. Press the button "PROGRAM" on the remote control during stop to enter the program play model. The display will glisteningly show "PROG".
2. Press the button skip forward/backward to enter the track number you want. Then press the button 'PROGRAM' to store. The display will show "P01 --".
3. Repeat the operation 2 to continue editing the track order.
4. After the edit finished, press the button ► to play as the order you edited.
5. Press the button "CLEAR" to cancel the program play.

## 4.2 Repeat Play

To repeat the track you chose

1. Repeat all/one selections

Press the button "REPEAT" during playing, the player will switch round among following three models:

Repeat one selection (display "↺") → Repeat all selection (display "ALL ↺") → Cancel the repeat



2. Starting repeat, the sign for repeat "↺" will light.
3. Press the button "Clear" to cancel the repeat.



## 5.1 Specification

### Generic

Disc Capacity	One Disc, 120 Or 80mm
CD Mechanism	CD-Pro2LF/AVM1254
Temperature	+5°C~+35°C
Digital Output	Coaxial X1
	BNC X1
	OpticsX1
	BalanceX1
Power Consumption	9W
Power Specifications	Specified On Rear Panel Decal
Dimendions(WXDXH)	430mmX375mmX123mm
Supplied accessories	Power cord×1
	Remote Controller×1
	Users' manual×1

### NOTE

Specification and design subject to change without notice for improvements.





No.126, Section 2, East 1 Round Chengdu, Sichuan, China P.C. 610051

You can find your nearest authorized distributor and more product information on our website:  
[www.xindak.com](http://www.xindak.com)



Printed in China