

 


INSTRUCTIONS

PA

Power Amplifier

Attention: Your product is marked with this symbol.

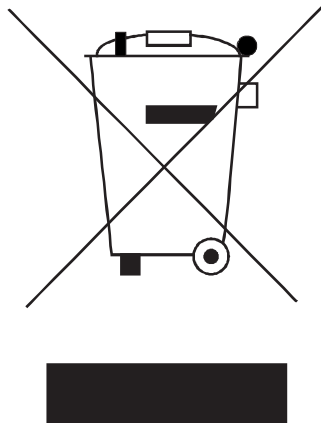

It means that used electrical and electronic products should not be mixed with general household waste. There is a separate collection system for these products.

A. Information on Disposal for Users (private household).

1. In the European Union

Attention: If You want to dispose of this equipment, please do not use the ordinary dust bin.

Used electrical and electronic equipment must be treated separately and in accordance with legislation that requires proper treatment, recovery and recycling of used electrical and electronic equipment.

Following the implementation by member states, private household within the EU states may return their used electrical and electronic equipment to designated collection facilities free of charge*. In some countries* your local retailer may also take back your local authority for further details.

If you used electrical or electronic equipment has batteries or accumulators, please dispose of these separately beforehand according to local requirements.

By disposing of this product you will help ensure that waste undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health which could otherwise arise due to inappropriate waste handling.

2. In the other Countries outside EU

If you wish to discard this product, please contact your local authorities and ask for the correct method of disposal.

For Switzerland: Used electrical or electronic equipment can be returned free of charge to dealer, even if you don't purchase a new product. Further collection facilities are listed on the homepage of www.swico.ch or www.sens.ch.

B. Information on Disposal of Business Users

 
1. In the European Union

If the product is used for business and you want to discard it:

Please contact local dealer who will inform you about the take-back of the product. You might be charged for the costs arising from take-back and recycling. Small products (and small amounts) might be taken back by your local collection facilities.

2. In the other Countries outside the EU

If you wish to discard of this product, please contact your local authorities and ask for the correct method of disposal.

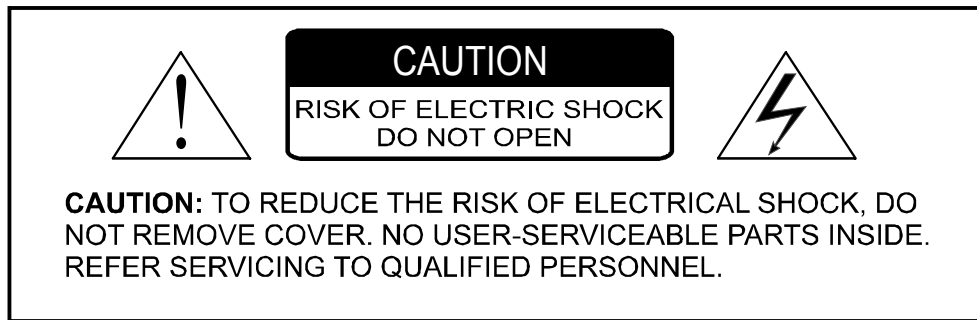

The exclamation point within an equilateral triangle is intended to alert the user to presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



 
The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to presence of uninsulated “Dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

Before Use

 
Please read all instructions and precautions carefully and completely before operating this device.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Always keep this unit out of the reach of children.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Unplug this apparatus during lightning storms or when unused for a long time.
11. Always disconnect your entire system from the AC mains before connecting or disconnecting any cable, or when cleaning any component.
12. This product must be terminated with a three conductor AC mains power cord which includes an earth ground connection, to prevent shock hazard, all three connections must always be used.
13. AC extension cords are not recommended for use with this product.
14. Never use flammable or combustible chemicals for cleaning audio components.
15. Never operate this product with any cover removed.
16. Never pour or spill liquids directly onto this unit.
17. Never block air flow through ventilation slots or heat sinks.
18. Never bypass any fuse.
19. Never replace any fuse with a value or type other than those specified.
20. Never attempt to repair this product, if a problem occurs, contact your dealer.
21. Never expose this product to extremely high or low temperatures.
22. Never operate this product in an explosive atmosphere.

2.1 Front & Rear Panel

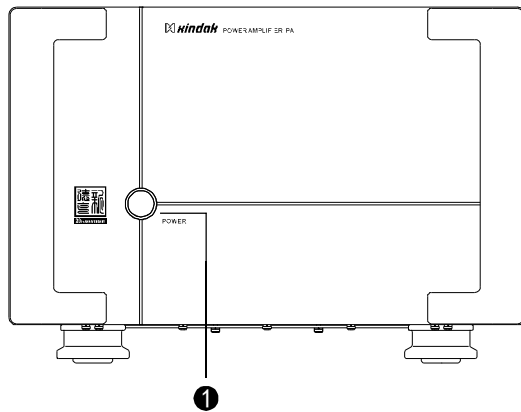**❶ Power Button**

Press this button, the current will be put through; press it again, the current will be cut off.

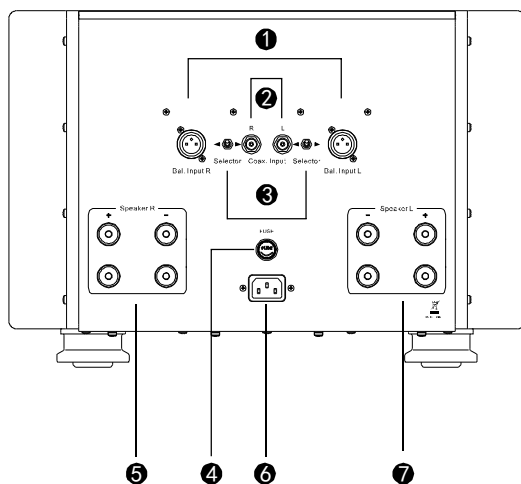**❶ Balance Signal Input Terminals**

Connect this terminal with the preamplifier (with balance output terminal) by balance interconnect cable.

❷ Coaxial-Signal Input Terminal

Connect this terminal and the coaxial signal output terminal on preamplifier with interconnect cable.

❸ Input Select Button

Use this button to make selection between coaxial input terminal and balance input terminal.

Fuse socket is used for insert the fuse of the device.

❹ Fuse Socket

Fuse socket is used for insert the fuse of the device.

❺ Right Speaker Output

Connect the loudspeakers according to the right channel and +/- indication to the corresponding port posts. The loudspeakers with the impedances 8Ω are recommended for this machine.

❻ Power Input socket

Connect this socket with wall outlet by the attached power cord.

❼ Left Speaker Output

Connect the loudspeakers according to the left channel and +/- indication to the corresponding port posts. The loudspeakers with the impedances 8Ω are recommended for this machine.

2.2 How to Use

In order to help user operate this amplifier more convenient, following is some frequently asked questions during the operation. If you want more information, please access www.xindak.com , E-mail: service@xindak.com or call: +86 028 84711993. Chengdu Xindak Electronic will service you with all our heart.

Problem	Possible Cause	Trouble-shootings
The machine is not electrified	Power connector not plug well	Plug the power connector again.
	Fuse has fused	Change the fuse coincide with the prompt requirement.
Speaker no sound	Sound source turned off	Turn on the sound source.
	Signal cable is broken	Check and change signal cable.
	Speaker cable is broken	Check and change speaker cable.
	Signal selector switch wrong	Tune input selection button according to sound source.
Noise too big	Root noise of sound source too big	Change a higher SNR sound.
	Signal shielding effect badly	Change eligible signal cable
Left and right channel confused	Signal source input phase opposed	Connect according to the indication of left and right channel.
	Speaker wire to channels has exchanged or positive negative reversed	
Indicator always glitters	There is problem on preamplifier, Loudspeaker cable or loudspeaker	Check the preamplifier, loudspeaker cable or loudspeakers

3.1 Specification

Output power	100W (Class A)
THD	≤0.03%
SNR	100dB
Frequency Response	10Hz-200KHz
Input Sensitivity	1.5V
Power Consumption	max. 450W
Net Weight	75Kg
Dimension (WxDxH)	430mm × 635mm × 295mm
Supplied accessories	Power Cord×1 Users' Manual×1

Notice: Specification and design for improvements subject to change without notice.



No.126, Section 2, East 1 Round Chengdu, Sichuan, China P.C. 610051

You can find your nearest authorized distributor and more product information on our website:
www.xindak.com



Printed in China