

 


INSTRUCTIONS

D2

D/A Convertor

Attention: Your product is marked with this symbol.

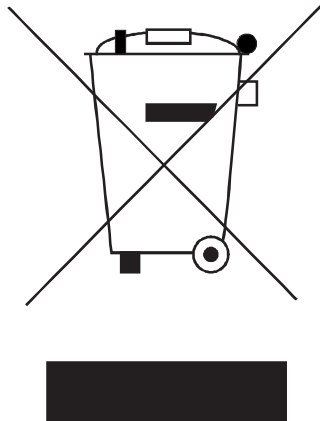

It means that used electrical and electronic products should not be mixed with general household waste. There is a separate collection system for these products.

A. Information on Disposal for Users (private household).

1. In the European Union

Attention: If You want to dispose of this equipment, please do not use the ordinary dust bin.

Used electrical and electronic equipment must be treated separately and In accordance with legislation that requires proper treatment, recovery and recycling of used electrical and electronic equipment.

Following the implementation by member states, private household within the EU states may return their used electrical and electronic equipment to designated collection facilities free of charge*. In some countries* your local retailer may also take back your local authority for further details.

If you used electrical or electronic equipment has batteries or accumulators, please dispose of these separately beforehand according to local requirements.

By disposing of this product you will help ensure that waste undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health which could otherwise arise due to inappropriate waste handling.

2. In the other Countries outside EU

If you wish to discard this product, please contact your local authorities and ask for the correct method of disposal.

For Switzerland: Used electrical or electronic equipment can be returned free of charge to dealer, even if you don't purchase a new product. Further collection facilities are listed on the homepage of www.swico.ch or www.sens.ch.

B. Information on Disposal of Business Users

1. In the European Union

 
If the product is used for business and you want to discard it:

Please contact local dealer who will inform you about the take-back of the product. You might be charged for the costs arising from take-back and recycling. Small products (and small amounts) might be taken back by your local collection facilities.


2. In the other Countries outside the EU

If you wish to discard of this product, please contact your local authorities and ask for the correct method of disposal.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

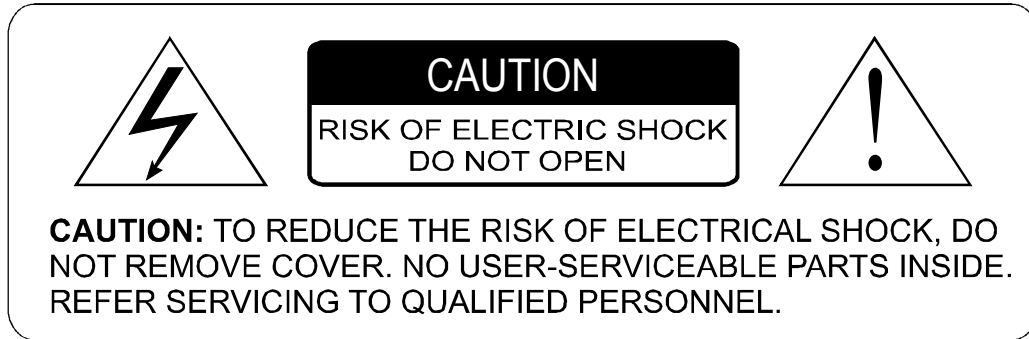

 CAUTION: TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE COVER. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.

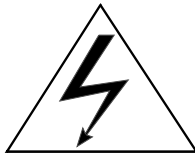

Dangerous Voltage

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to presence of uninsulated “Dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



Important Instructions

The exclamation point within an equilateral triangle is intended to alert the user to presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

2.1 Before Use

 
Please read all instructions and precautions carefully and completely before operating this product.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Always keep this unit out of the reach of children.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Unplug this apparatus during lightning storms or when unused for a long time.
11. Always disconnect your entire system from the AC mains before connecting or disconnecting any cable, or when cleaning any component.
12. This product must be terminated with a three conductor AC mains power cord which includes an earth ground connection, to prevent shock hazard, all three connections must always be used.
13. AC extension cords are not recommended for use with this product.
14. Never use flammable or combustible chemicals for cleaning audio components.
15. Never operate this product with any cover removed.
16. Never pour or spill liquids directly onto this unit.
17. Never block air flow through ventilation slots or heat sinks.
18. Never by pass any fuse.
19. Never replace any fuse with a value or type other than those specified.
20. Never attempt to repair this product, if a problem occurs, contact your dealer.
21. Never expose this product to extremely high or low temperatures.
22. Never operate this product in an explosive atmosphere.


2.2 Check Accessory

Unpack this product and keep all packing materials for future transport or service, locate and remove all accessory items from the accessory box within the controller shipping carton.

Accessories Included:

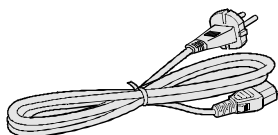

 1. AC power cord × 1




2. Remote controller



3. Users' manual (This manual)

 3.1 Remote Controller

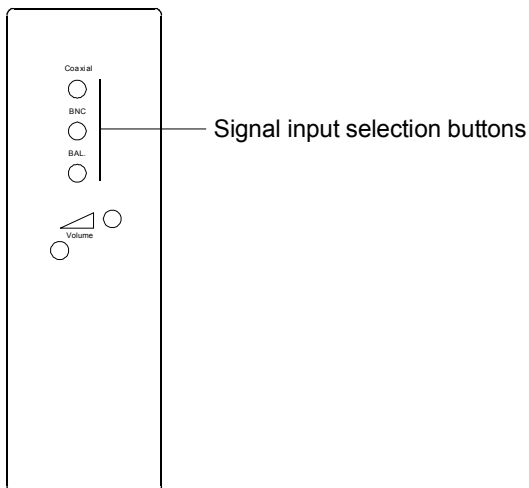


Install Batteries

Before using the remote controller for the first time, you need install the new battery in the remote controller.


Process

 1. Use the tool to remove the rear cover of the remote control unit.
2. Install the 2 batteries (AAA) with correct +/- polarity.
3. Reinstall the rear cover of the remote control unit.

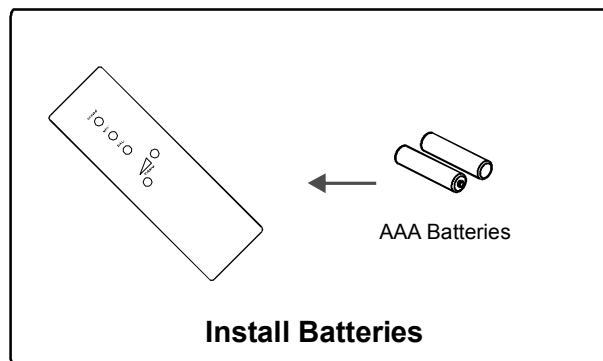

Battery Replacement

 1. Use the tool remove the rear cover of the remote control unit.
2. Take out the old batteries from remote control unit.
3. Install the 2 batteries (AAA) with correct +/- polarity.
4. Reinstall the rear cover of the remote control unit.

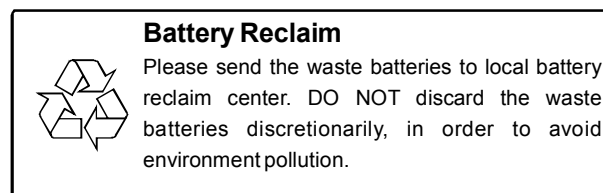


Caution

1. Do not use new and old batteries simultaneously.
2. Batteries with similar shapes may have different rated voltage, be sure to use the correct batteries.
3. Remove batteries from the remote control unit if it will not be used for a long period of time.


Using Remote Controller

If you use the remote control unit to control the D10:

 
1. The remote control range is approximately 5 meters.
2. Pointing the remote control on an angle to the receiver, will shorten the useful distance of the remote control.

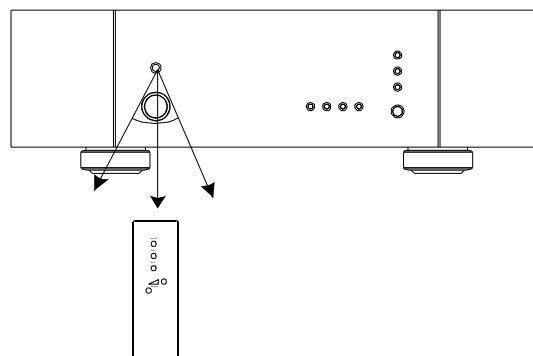

 3.2 Front Panel

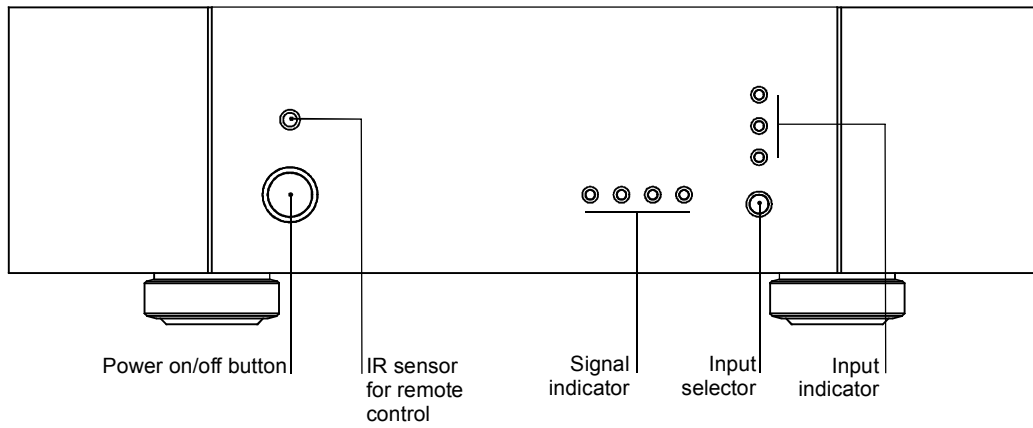

 3.3 Rear Panel

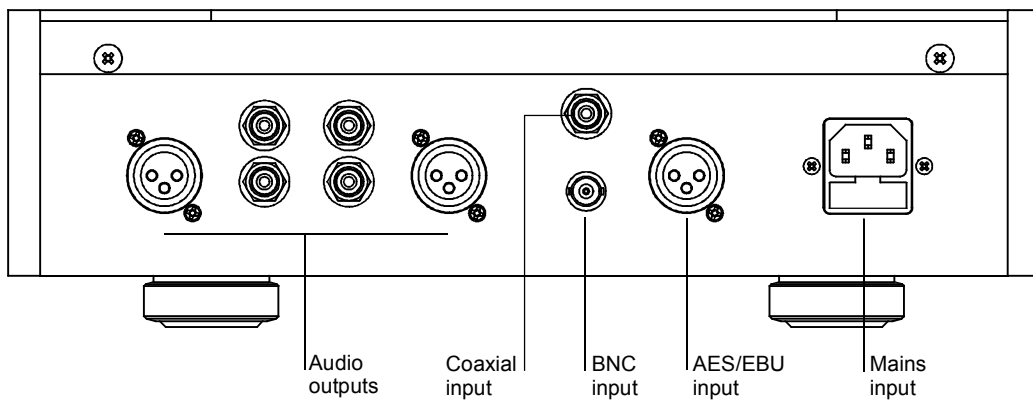

4.1 Specifications

System:	Stereo audio digital to analog converter
Power specifications	Specified on rear panel decal
Power consumption	max. 11W
Frequency range	20Hz-20KHz, 0.5dB
Dynamic range	125dB
Harmonic distortion+Noise(THD+N)	-100dB(With A-Weighted)
Signal-to-Noise Ratio	-110dB
Interchannel Crosstalk	-130dB
Digital coaxial input	0.5Vp-p
Digital coaxial input impedance	75Ω
Output voltage	2V(RMS,0dB)
Net weight	7Kg
Dimensions(WXHXD)	330mmx101mmx317mm

NOTE

Specification and design subject to change without notice for improvements.



No.126, Section 2, East 1 Round Chengdu, Sichuan, China P.C. 610051

You can find your nearest authorized distributor and more product information on our website:
www.xindak.com



Print in China