

 


INSTRUCTIONS

XA3200MKII

Pre-Amplifier

Attention: Your product is marked with this symbol.

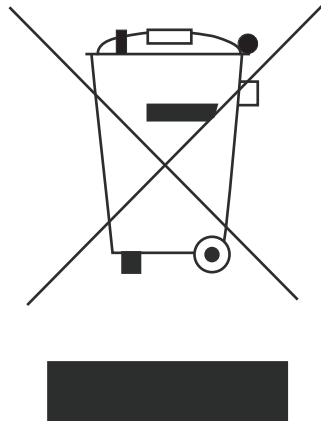

It means that used electrical and electronic products should not be mixed with general household waste. There is a separate collection system for these products.

A. Information on Disposal for Users (private household).

1. In the European Union

Attention: If You want to dispose of this equipment, please do not use the ordinary dust bin.

Used electrical and electronic equipment must be treated separately and In accordance with legislation that requires proper treatment, recovery and recycling of used electrical and electronic equipment.

Following the implementation by member states, private household within the EU states may return their used electrical and electronic equipment to designated collection facilities free of charge*. In some countries* your local retailer may also take back your local authority for further details.

If you used electrical or electronic equipment has batteries or accumulators, please dispose of these separately beforehand according to local requirements.

By disposing of this product you will help ensure that waste undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health which could otherwise arise due to inappropriate waste handling.

2. In the other Countries outside EU

If you wish to discard this product, please contact your local authorities and ask for the correct method of disposal.

For Switzerland: Used electrical or electronic equipment can be returned free of charge to dealer, even if you don't purchase a new product. Further collection facilities are listed on the homepage of www.swico.ch or www.sens.ch.

B. Information on Disposal of Business Users

1. In the European Union

 
If the product is used for business and you want to discard it:

Please contact local dealer who will inform you about the take-back of the product. You might be charged for the costs arising from take-back and recycling. Small products (and small amounts) might be taken back by your local collection facilities.

2. In the other Countries outside the EU

If you wish to discard of this product, please contact your local authorities and ask for the correct method of disposal.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

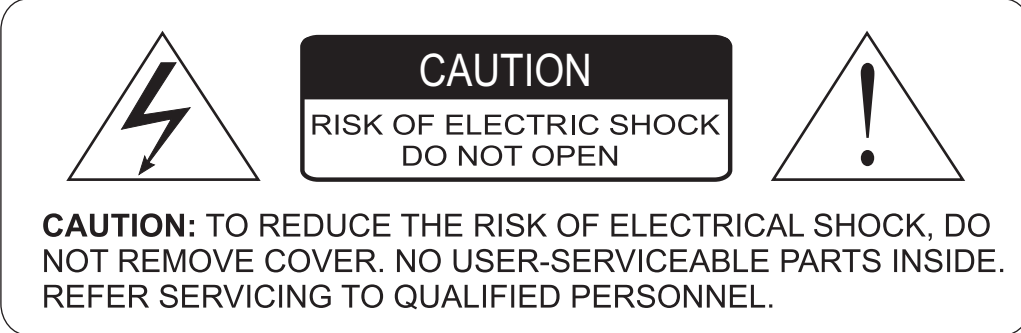

CAUTION: TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE COVER. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.



Dangerous Voltage

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to presence of uninsulated “Dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



Important Instructions

The exclamation point within an equilateral triangle is intended to alert the user to presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

1.1 Before Use

 
Please read all instructions and precautions carefully and completely before operating your XA3200MKII stereo preamplifier.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Always keep this unit out of the reach of children.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Unplug this apparatus during lightning storms or when unused for a long time.
11. Always disconnect your entire system from the AC mains before connecting or disconnecting any cable, or when cleaning any component.
12. This product must be terminated with a three conductor AC mains power cord which includes an earth ground connection, to prevent shock hazard, all three connections must always be used.
13. AC extension cords are not recommended for use with this product.
14. Never use flammable or combustible chemicals for cleaning audio components.
15. Never operate this product with any cover removed.
16. Never pour or spill liquids directly onto this unit.
17. Never block air flow through ventilation slots or heat sinks.
18. Never by pass any fuse.
19. Never replace any fuse with a value or type other than those specified.
20. Never attempt to repair this product, if a problem occurs, contact your dealer.
21. Never expose this product to extremely high or low temperatures.
22. Never operate this product in an explosive atmosphere.


1.2 Check Accessory

Unpack your XA3200MKII stereo preamplifier and keep all packing materials for future transport or service, locate and remove all accessory items from the accessory box within the controller shipping carton.

Accessories Included:

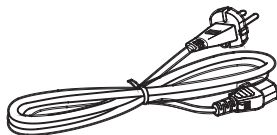

 1. AC power cord × 1




2. Remote controller × 1




3. User manual (This manual)

 2.1 Front Panel

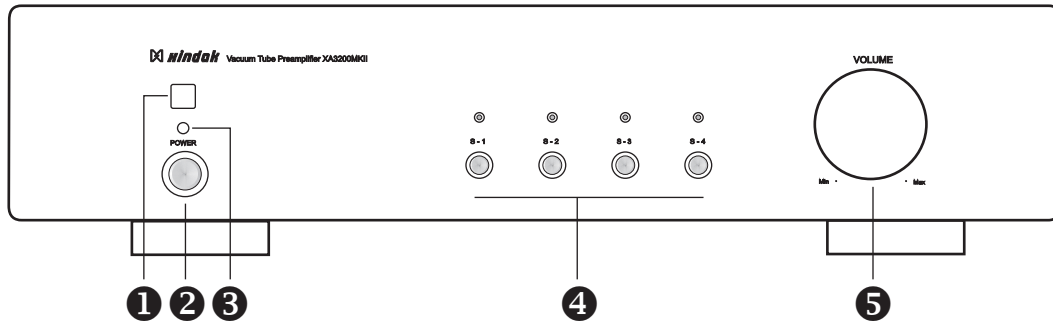

- 1 Sensor window for remote control**
Aiming the remote control to this window can operate this unit.
- 2 Power button**
This button connects and disconnects the XA3200MKII from the AC mains power. By using the button to turn the system on and off.
- 3 Power Indicator**
Power Indicator.
- 4 Signal channel selector buttons**
Press these button, the signal input channel will be changed from S1 to S4.
- 5 Sound volume control knob**
The sound volume will be increased while this knob is adjusted clockwise and decreased while adjusted anticlockwise.

 2.2 Rear Panel

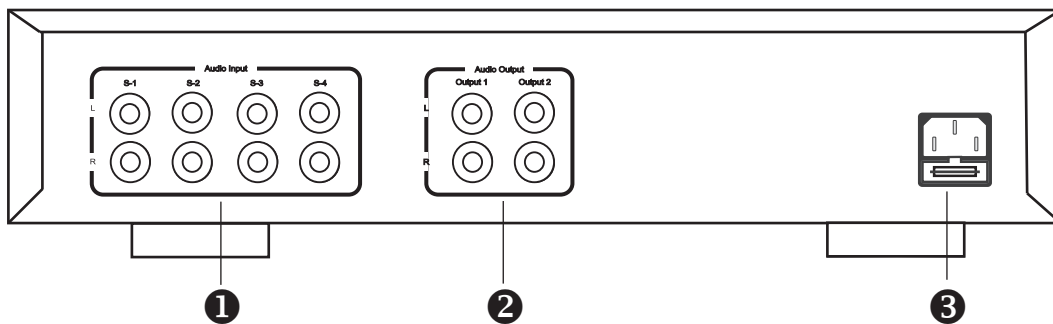

- 1 Audio Input**
Connect the input signal by RCA.
- 2 Audio Output**
Output signal connector.
- 3 Power supply input jack and safety cutout jack**
Connect it to the power supply by attached power cord.

3.1 The Installation of the Battery

Install Batteries

Before using the remote controller for the first time, you need install the new batteries in the remote controller.

Process

 
 
1. Use the tool to remove the rear cover of the remote controller.
2. Install the 2 batteries (AAA) with correct +/- polarity.
3. Reinstall the rear cover of the remote control unit.

Battery Replacement

1. Use the tool remove the rear cover of the remote controller.
2. Take out the old batteries from remote control unit.
3. Install the 2 batteries (AAA) with correct +/- polarity.
4. Reinstall the rear cover of the remote control unit.


Caution

1. Do not use new and old batteries simultaneously.
2. Batteries with similar shapes may have different rated voltages. Be sure to use the correct batteries.
3. Remove batteries from the remote control unit if it will not be used for a long period of time.
4. After a certain period of time's use, if the valid distance of the remote controller is shortened, please replace the batteries in time.

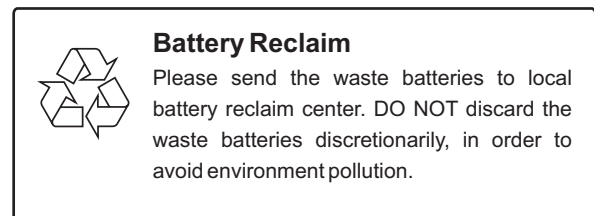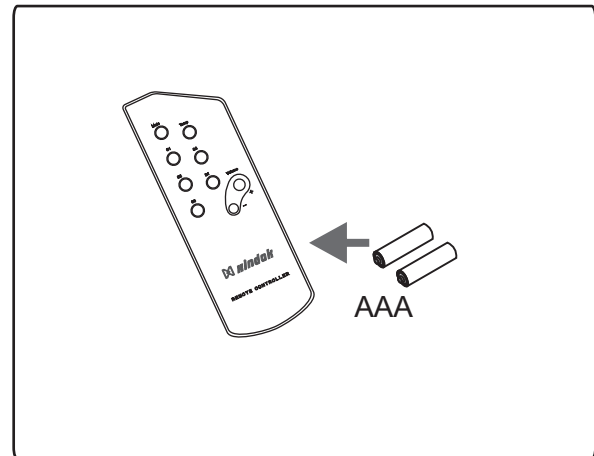


3.2 For Using the Remote Controller

 You can achieve the following functions conveniently by using the remote controller

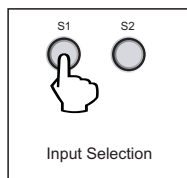

Control the amplifier by using the remote controller:

 1. The maximum valid distance is 5 meters.
2. Please locate the remote controller towards the remote receiving window to make sure the amplifier can work normally.

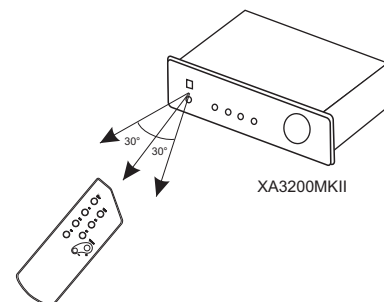

Mute(mute): No use for this button.

F1: No use for this button.

S1-S4: The machine will get through any of the path from path 1 to path 4 according to your selection.

Bal: No use for this button.

Volume +: Press this button and the volume will increase continuously.

Volume -: Press this button and the volume will decrease continuously.

4.1 Specifications

Generic

System:	Stereo Tube Pre. Amplifier
Temperature:	+5°C~+35°C
Humidity:	5%~85%
Frequency response :	10Hz-100KHz, ± 1dB
Total harmonic distortion(THD):	≤0.1%
Signal-to-Noise Ratio:	≥87dB
Output voltage:	8.5V(RMS)
Vacuum tubes:	12AT7*2、 12AX7*2
Weight:	7Kg
Dimensions(W*H*D):	430mm×104mm×312mm
Supply voltage	Specified on rear panel

Accessories

AC power cord:	1
Remote Controller:	1
User's manual:	1

NOTE

Specification and design subject to change without notice for improvements.

For Customer Use:

Enter below the Model number and Serial number
Which is located either on rear, bottom or side of
the cabinet. Retain this information for future
reference.

Model No. XA3200MKII

Serial No. _____



No.126, Section 2, East 1 Round Chengdu, Sichuan, China P.C. 610051

You can find your nearest authorized distributor and more product information on our website:
www.xindak.com



Print in China